

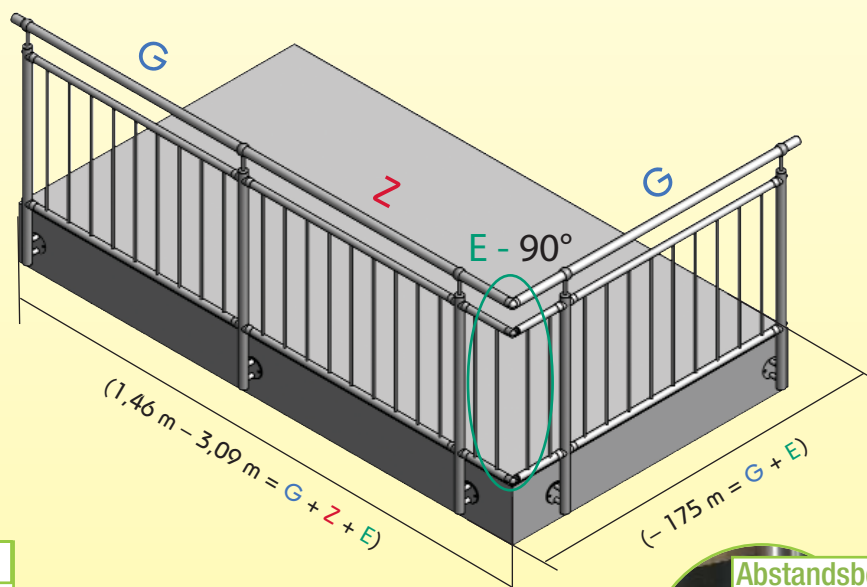
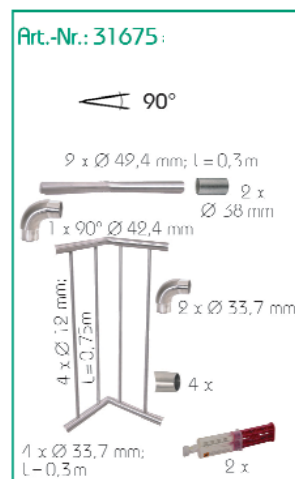
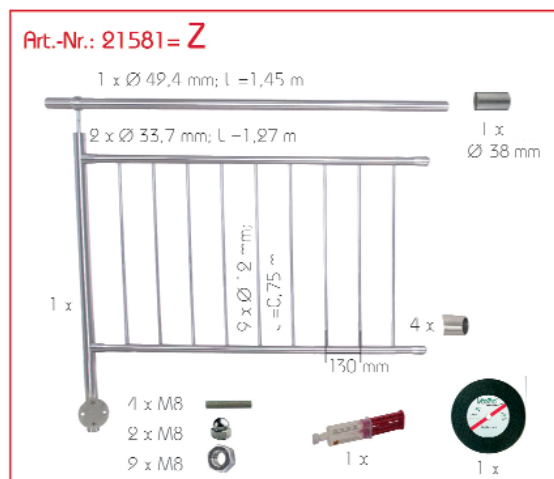
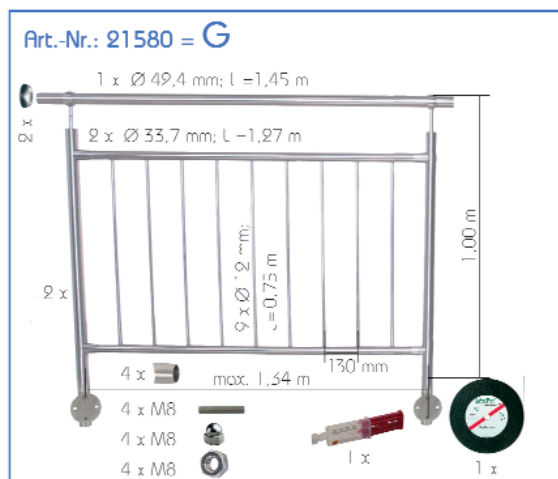
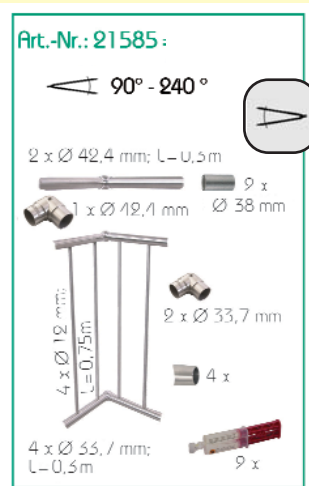


$$\begin{aligned}
 &- 1,45 \text{ m} &&= G \\
 &1,46 \text{ m} - 3,09 \text{ m} &&= G + 1 \times Z + E \\
 &3,10 \text{ m} - 4,44 \text{ m} &&= G + 2 \times Z + E \\
 &4,45 \text{ m} - 5,78 \text{ m} &&= G + 3 \times Z + E \\
 &5,79 \text{ m} - 7,12 \text{ m} &&= G + 4 \times Z + E \\
 &\dots
 \end{aligned}$$

Design Innsbruck

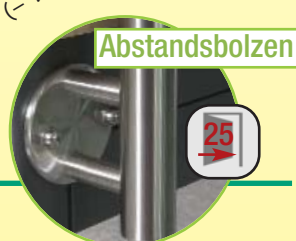

**Diese beiden
Eckmodule
sind auch bei
aufgesetzter
Montage zu
verwenden!**

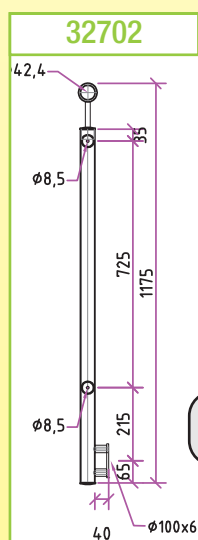

32710



M8



32714



M8 x 80



32715



M8



22454

